





FRONTIER WARGAMING


MEDIEVAL TAVERN


Tools you might need during the assembly: hobby knife, file, PVA (white glue) or super glue or epoxy glue, a small screwdriver.

1. Assemble the walls as shown in pictures "A" and "A1". For better durability glue the walls together.

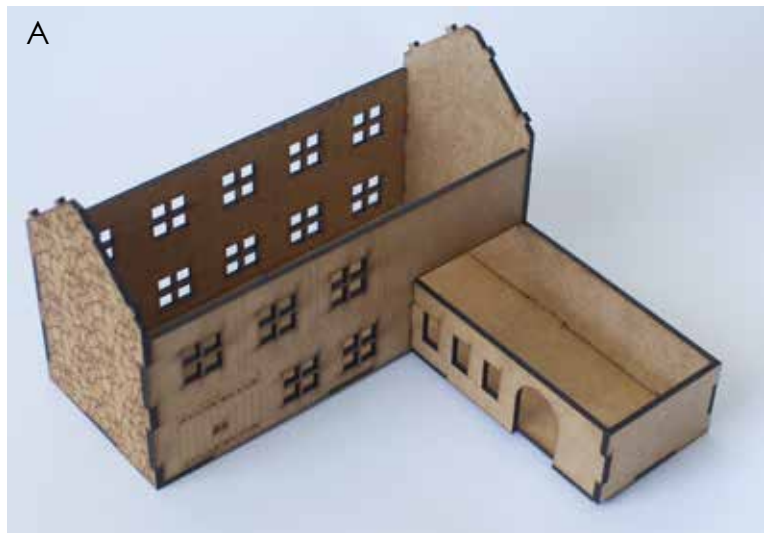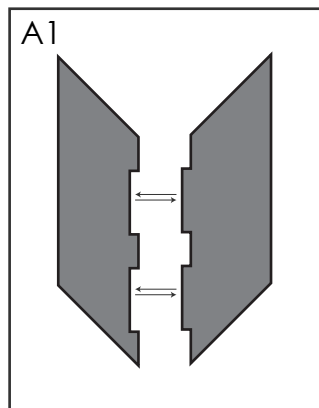

2. Attach the roof as shown in pictures "B" and "B1". Glue it together, if necessary, but it should fit nicely without glue.

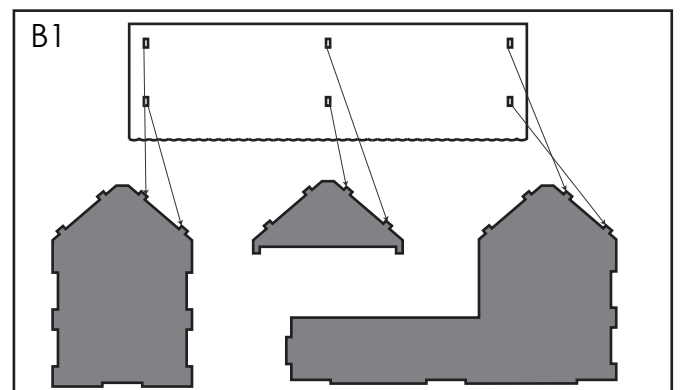


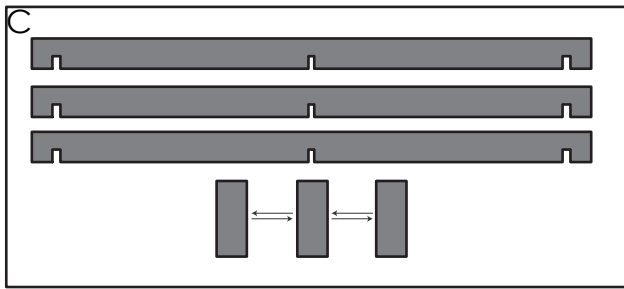


3. Glue the three parts of the ridge together, as shown in picture "C" and snap it into place, between the roof slopes.

4. Assemble the chimney as shown in picture "D". Glue it together for better durability.



5. Assemble the smaller, detachable roof, in the same fashion. See picture "E" for reference.

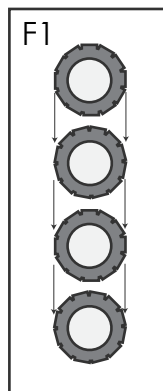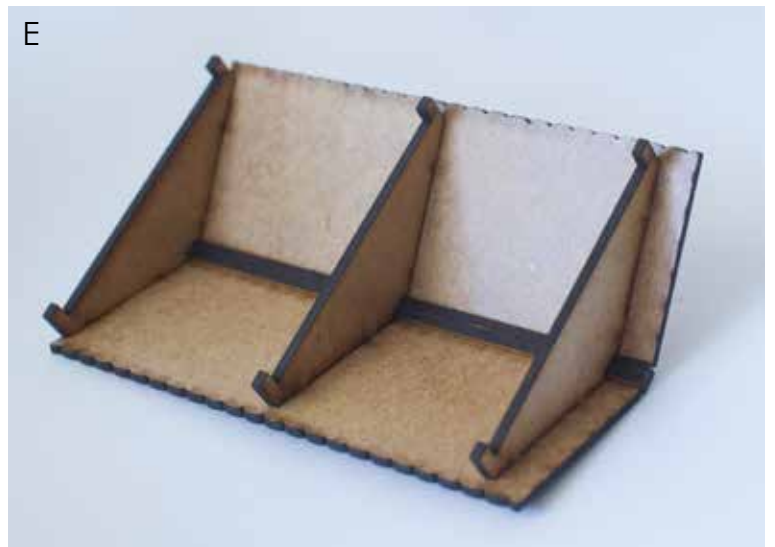

6. Glue together the well, as shown in pictures "F" and "F1". Rotate every other ring at 90° to achieve the effect shown.

7. Glue and assemble the parts of the fence. Attach the hinges as shown in picture "G"



H



8. Glue the windowsills, the door casing, timbering and corner bricks into place. Use pictures "H" and "H1" for reference.

H1



If You have any kind of questions or suggestions, please don't hesitate and email us to frontier.wargaming@gmail.com.