First please carefully unpack the paint rack and find a flat surface to put all the parts. If you have bough different racks please try not to mix the parts and assemble one rack at a time.

We recommend using fast setting epoxy glue or PVA to glue the paint rack, but you can also assemble it without gluing. Please assemble it first and then apply the glue to connected parts. Your rack can smell of burnt wood when you receive it, but it will go away shortly.

To assemble the straight rack you need to connect the horizontal parts with one of the walls first as


shown on the picture 1.


Please notice that the side with more which has more burned edges is the upper one. Take a look at the walls - the side which has the place for magnets engraved is the upper one.

Then you need to connect the second wall and put the narrow horizontal parts in place.


Finally attach the floor and glue the magnets on the engraved circles. Do not forget about magnet polarity while gluing them.


If you have difficulty in connecting some parts you can use a sharp knife to whittle away the excess.

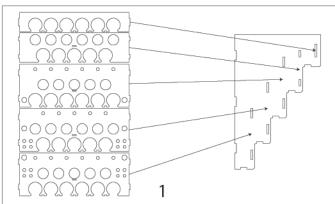

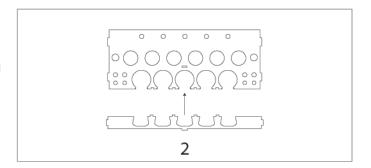

To assemble the corner paint rack please follow all the steps from above and refer to these pictures:

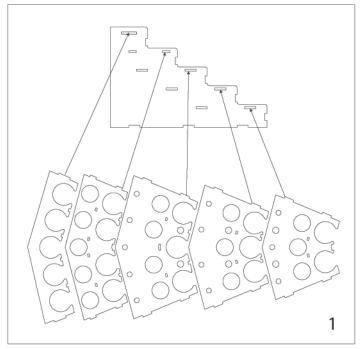


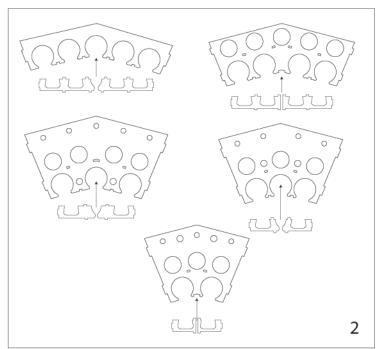


## Tool rack assembly

This rack will take more time to assemble as it is more complex. If you have any problems you can look at the pictures on the Ebay listing or contact us and we will be happy to help

First connect the parts show on the picture into one piece and then attach them to the side wall.

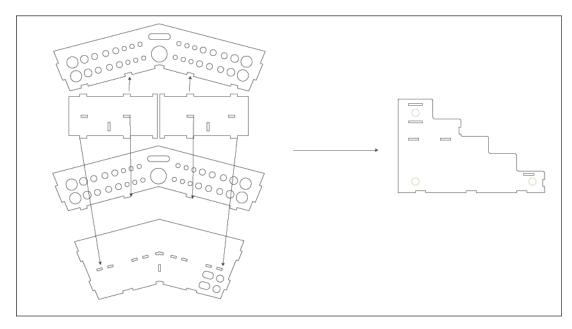

Now attach the parts with our logo and the part shown on the picture to the assembled piece. Once you finished connecting these parts attach the second wall.

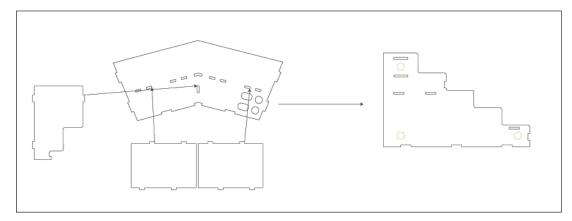

Finally put everything on the floor piece and connect the shelf parts as seen on the picture below.

